

BABY HIGH CHAIR WITH SAFE-LOCK FRAME INSTRUCTIONS

CONTENTS

(1) Carry Bag (1) High Chair



USE/FEATURES

Never leave your child unattended!

This highchair is not a toy or an article for children to play with.

Read enclosed instructions carefully before use and keep them for future reference.

- When collapsing and extending the high-chair take every precaution to ensure that children are not in close proximity of the high-chair to prevent their fingers getting jammed or pinched etc.

- To avoid the risk of suffocation always remove the plastic sleeve and/or carrier bag from this item and keep it away from babies and toddlers.

- This collapsible highchair is suitable for babies and toddlers 6 to 36 months in age or up to 15 kg (33.07 lbs) in weight.

Imported.


CARE

Use a damp cloth to clean. Do not use chemicals.

WARNING! ADJUST AND SECURE 3-POINT HARNESS TO SAFELY SECURE CHILD IN HIGH CHAIR. NEVER LEAVE YOUR CHILD UNATTENDED!

SET-UP INSTRUCTIONS

Step 1

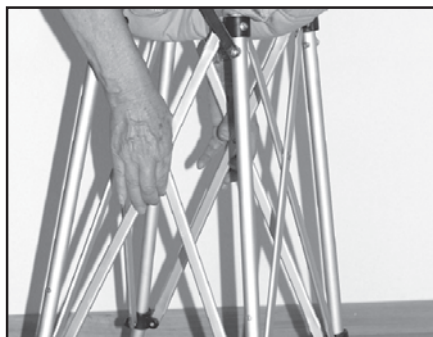

Remove high chair from carry bag and unfold. Extend the frame (from X-hinge outward) in one quick motion.

Step 2



Press down and secure the frame lock on the front and back of the high chair.

Step 3



Fasten the two elastic loops to the sides of the footrest to secure to frame.

FOLD-DOWN INSTRUCTIONS (Reverse steps above)

Step 1



Unfasten the two elastic loops on the sides of the footrest.

Step 2



Lift the locking mechanisms on the front and back of the high chair.

Step 3



Collpase high chair ensuring fabric and fingers are not pinched in any moving parts. Place high chair in protective carry bag for storage or travel.